

CS470xx Firmware User's Manual: General Overview and Common Firmware Modules


Contents

- Document Strategy
- Overview
- Firmware Messaging
- OS Firmware Module
- Audio Manager Firmware Module
- PCM Firmware Module
- Watchdog Timer
- Document Revisions

Overview

This document provides a description of the operation of firmware for the CS470xx family of DSPs and attempts to explain frequently used terminology and, at the same time, systematically explains the OS operation and communication for the CS470xx.

This document is a general overview to the family of CS470xx Firmware User's Manuals designated by the general name AN333[X][Y]; where [X] = MPM (matrix processing module), VPM (virtual processing module), PPM (post processing module), and [Y] = A,B,C. The CS470xx family of DSPs does not contain a compressed data decoder.

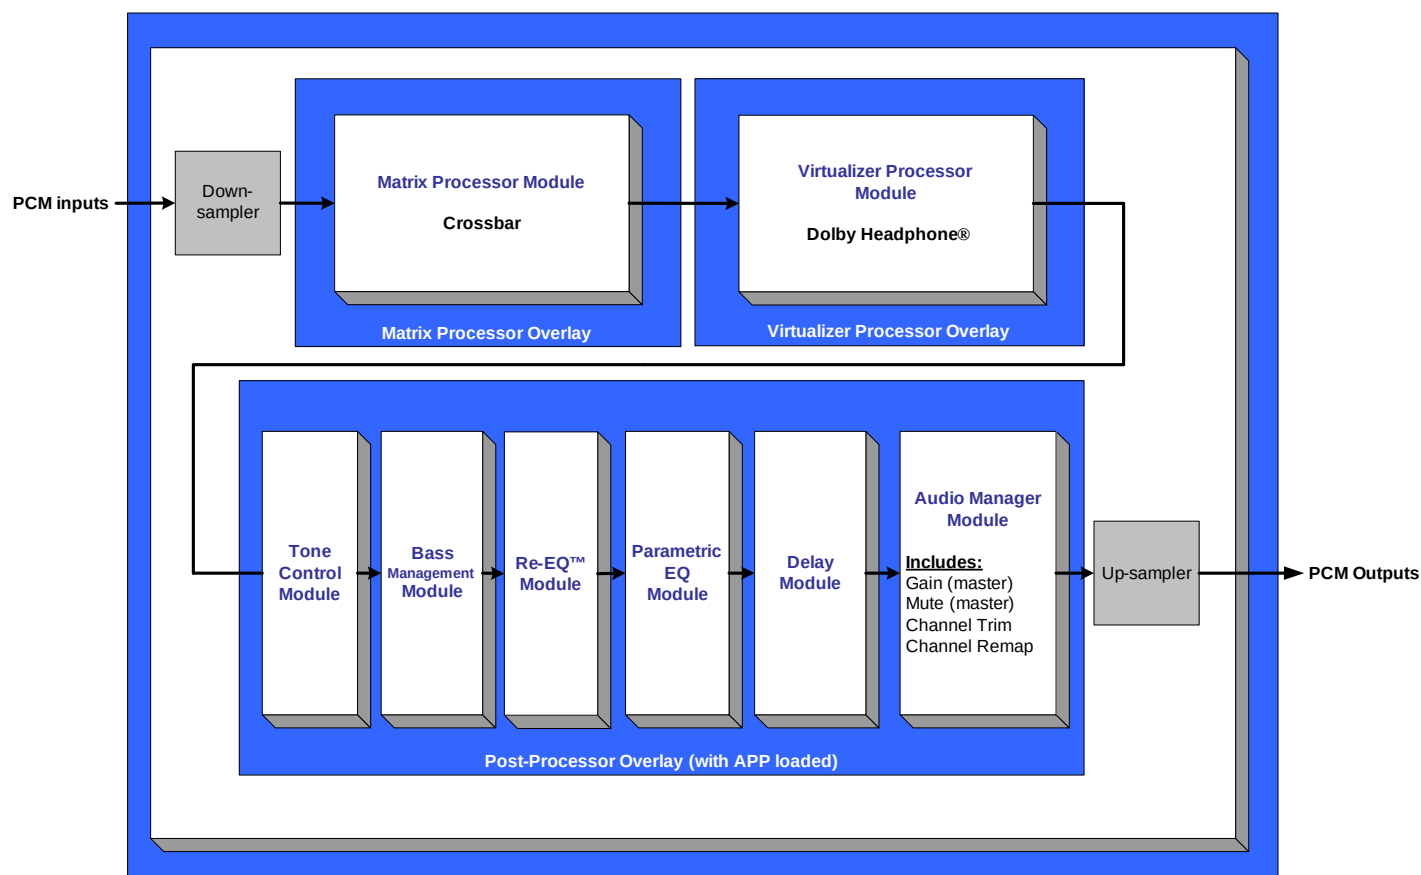

CS470xx Block Diagram

1 Document Strategy

The CS470xx has been designed with inherently flexibility in terms of firmware usage. Each instance of operation of the CS470xx can potentially use a different mix of DSP firmware, depending on the needs of the end user. The strategy adopted to document the various DSP firmware is based on a single general overview firmware user's manual coupled with an individual application note for each DSP firmware module offered by Cirrus Logic.

The individual application notes each follow as an extension of AN333. These manuals have been named in such a way so as to classify them into one of the following categories:

- Operating system and general overview
- Matrix processing module (MPM)
- Virtual processing module (VPM)
- Post-processing module (PPM)

Furthermore, since each classification such as post-processing module) may contain several associated DSP firmware modules, an incremental letter assignment (such as A, B, C) was given to index each DSP firmware document within a given category. As an example, the table below outlines the general naming conventions for several firmware documents.

Table 1-1. Naming Conventions

DSP Firmware Module	Base Name	Overlay Type	Index	Document Reference Number
General Overview, Operating System and Common Firmware Modules	AN333	(General)	—	AN333
Delay Module	AN333	Post Processing Module (PPM)	a	AN333PPMA
Crossbar Mixer Module	AN333	Matrix Processing Module (MPM)	c	AN333MPMC
Dolby Headphone 2	AN333	Virtual Processing Module (VPM)	a	AN333VPMA

For a further breakdown of the available CS470xx firmware modules and their respective application note document numbers, see [Section 2.3](#). Contact your local field applications engineer (FAE) for the latest code updates and availability.

2 Overview

The firmware that runs on this device expects a stereo or multichannel PCM input source. This section describes the overlays.

The DSP program memory is divided into five functional segments called *overlays* that can be thought of as the locations for the firmware modules that are accessed and implemented by the DSP. *Firmware modules* are downloaded into their respective overlays either from internal ROM, or from the host.

- **OS Overlay**
Manages the overall operation of the DSP. Also handles host communication, data inputs and outputs, and other critical internal tasks.
- **Decoder Overlay**
The decoder overlay on CS47xx only supports the Dolby Digital® decoder in certain memory maps.
- **Matrix Processing Overlay**
Performs additional channel generation, upmixing, and downmixing. This overlay is where algorithms such as Dolby® Pro Logic® IIx and Cirrus Original Multichannel Surround 2™ (COMS-2) reside.
- **Virtual Processing Overlay**
Performs stereo virtualizing to simulate multichannel systems, such as Dolby® Audistry, Dolby Headphone®, and Dolby Virtual Surround™.
- **Post-processing Overlay**
This overlay specifically caters to firmware that performs post-processing tasks. It allows the system designer flexibility in tweaking the system for optimal audio performance and effects. This is also the segment in which firmware modules such as the Audio Manager, Bass Manager, Tone Control, Delay, and Parametric EQ Module reside.

2.1 Code Image (.uld) Files

Each overlay is a separate code image file (.uld) that is loaded individually into the DSP. To change the functionality of the application, only the overlay of interest needs to be loaded. For example the post-processing overlay can be exchanged from SPP to APP by reloading only the post-processing overlay. This reduces the system response time to user changes, as well as the code image storage requirements.

There are four different memory configurations of the program RAM size, denoted by p2, p4, p6, and p8 (p for program memory; 2, 4, 6, and 8 are the number of kilowords; 1 word = 32 bits). Increasing P RAM decreases Y RAM, while X RAM remains the same. Each overlay is denoted as p2, p4, p6, or p8 in the .uld file name to indicate which memory configuration is used. For example, "ac3_p2_xxx.uld".

Memory configuration must be consistent across all overlays (OS, decoder, MPM, VPM, and PPM).

2.2 Download Sequence

A standard procedure to download firmware to the DSP follows this structure at system power-up:

Step 1: Download the firmware OS_p*_.uld**

Automatically fills the OS overlay. (*2, 4, 6, or 8 for memory map ; **device and version)

**Step 2 (optional): Download a matrix processing module**

(Examples: Crossbar Mixer, Pro Logic IIx, DTS Neo:6®)
Automatically fills the matrix processing overlay.

**Step 3 (optional): Download a virtual processing module**

(Examples: Dolby Headphone, Dolby Virtual Speaker™)

Automatically fills the virtual processing overlay.

**Step 4: Download a post -processor module group**

(Examples: SPP, APP)

Automatically fills the post-processing overlay. If SPP or APP is not required, then the bare requirement for this overlay is the Audio Manager module.

Figure 2-1. Download Sequence

2.3 Firmware Modules and Associated Application Notes

Table 2-1. Firmware Module Read and Write Addresses with Associated Application Note Reference

DSP Firmware Module / (Application Note Name)	Supported Memory Map(s) (Firmware Version)	Write Request	Read Request	Read Response
General				
OS Manager (AN333)	01, 03, 05, 07, 09	0x8100HHHH 0xhhhhhhhh	0x81C0HHHH	0x01C0HHHH 0xhhhhhhhh
Matrix Processing Overlay				
Dolby Pro Logic IIx (AN333MPMA)	01, 07	0xBF00HHHH 0xhhhhhhhh	0xBF00HHHH	0x3FC0HHHH 0xhhhhhhhh
DTS Neo:6 (AN333MPMB)	01	0xB500HHHH 0xhhhhhhhh	0xB5C0HHHH	0x35C0HHHH 0xhhhhhhhh
Crossbar (AN333MPMC)	01, 03, 05, 07, 09	0xDB00HHHH 0xhhhhhhhh	0xDBC0HHHH;	0x5BC0HHHH 0xhhhhhhhh
SRS® Circle Surround® SRS Circle Surround II SRS Circle Surround Auto (AN333MPMG)	03, 05	0xB300HHHH 0xhhhhhhhh	0xB3C0HHHH	0x33C0HHHH 0xhhhhhhhh
Signal Generator (AN333MPMH)	01, 03	0x9A00HHHH 0xhhhhhhhh	0x9AC0HHHH	0x1AC0HHHH 0xhhhhhhhh
Cirrus Original Multichannel Surround 2 (COMS-2) (AN333MPMJ)	03	0xD300HHHH 0xhhhhhhhh	0xD3C0HHHH	0x53C0HHHH 0xhhhhhhhh
Virtual Processor Overlay				
SRS TruSurround XT® (AN333VPMH)	01	0xBA00HHHH 0xhhhhhhhh	0xBAC0HHHH	0x3AC0HHHH 0xhhhhhhhh
Dolby Headphone 2 (AN333VPMK)	01	0xC000HHHH 0xhhhhhhhh	0xC0C0HHHH	0x40C0HHHH 0xhhhhhhhh
Dolby Virtual Speaker 2 (AN333VPML)	01	0xC100HHHH 0xhhhhhhhh	0xC1C0HHHH	0x41C0HHHH 0xhhhhhhhh
SRS® TruSurround HD4™ Modules (with SRS WOW HD®) (AN333VPMM)	05	0xB300HHHH 0xhhhhhhhh	0xB3C0HHHH	0x33C0HHHH 0xhhhhhhhh

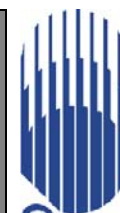


Table 2-1. Firmware Module Read and Write Addresses with Associated Application Note Reference (Cont.)

DSP Firmware Module / (Application Note Name)	Supported Memory Map(s) (Firmware Version)	Write Request	Read Request	Read Response
Virtual Processor Overlay (continued)				
Cirrus Virtualization Technology (CVT) - Virtualizer Processor Module (AN333VPMN)	09	0xC100HHHH 0xhhhhhhhh	0xC1C0HHHH	0x41C0HHHH 0xhhhhhhhh
Post-processing Overlays				
Audio Manager (AN333)	01, 03, 05, 07, 09	0x8300HHHH 0xhhhhhhhh	0x83c0HHHH	0x03c0HHHH 0xhhhhhhhh
PCM Manager (AN333)	01, 03, 05, 07, 09	0x9B00HHHH 0xhhhhhhhh	0x9BC0HHHH	0x1BC0HHHH 0xhhhhhhhh
Delay (AN333PPMA)	01, 03, 05, 07, 09	0xD900HHHH 0xhhhhhhhh	0xD9C0HHHH	0x59C0HHHH 0xhhhhhhhh
Bass Manager (AN333PPMB)	01, 03, 05, 07, 09	0xD700HHHH 0xhhhhhhhh	0xD7C0HHHH	0x57C0HHHH 0xhhhhhhhh
Cirrus Band Xpander (BXR) (AN333PPMC)	01	0xE700HHHH 0xhhhhhhhh	0xE7C0HHHH	0x67C0HHHH 0xhhhhhhhh
Cirrus Dynamic Volume Leveler (DVL) (AN333PPMD)	01	0xE600HHHH 0xhhhhhhhh	0xE6C0HHHH	0x67C0HHHH 0xhhhhhhhh
EQ Module with PEQ and Direct Coefficient Mode (11-bands) (AN333PPME)	01, 03, 05, 07, 09	0xD500HHHH 0xhhhhhhhh	0xD5C0HHHH	0x55C0HHHH 0xhhhhhhhh
Tone Control (AN333PPMF)	01, 03, 05, 07, 09	0xD400HHHH 0xhhhhhhhh	0xD4C0HHHH	0x54C0HHHH 0xhhhhhhhh
Cinema Re-EQ™ (AN333PPMK)	01, 03	0xDC00HHHH 0xhhhhhhhh	0xDCC0HHHH	0x5CC0HHHH 0xhhhhhhhh

Table 2-1. Firmware Module Read and Write Addresses with Associated Application Note Reference (Cont.)

DSP Firmware Module / (Application Note Name)	Supported Memory Map(s) (Firmware Version)	Write Request	Read Request	Read Response
Post-processing Overlays (continued)				
SPP (Standard Post Processing) in DSP Composer Module Processing Order: 1. Tone Control 2. BM 3. Delay 4. AM See individual module application notes.	01, 03, 05, 07, 09	—	—	—
APP (Advanced Post Processing) in DSP Composer Module Processing Order: 1. Tone Control 2. ReEQ 3. BM 4. EQ 5. Delay 6. AM See individual module application notes.	01, 03	—	—	—

3 Firmware Messaging

While using the CS470xx it is necessary to communicate with the DSP in order to control or monitor the various downloaded firmware modules. We refer to this process of communication as firmware messaging. The purpose of this section is to describe the types and formats of these firmware messages. In general, the user can control the firmware module running on the DSP with firmware messaging, and subsequently perform various tasks including the following:

- Configure the module after firmware download (such as kick-starting the DSP)
- Change run-time parameters (such as adjusting the volume or switching Pro Logic II modes)
- Obtain information from the DSP (such as the current state of the firmware registers or data stream information)

3.1 Communication Overview

From a microprogramming point of view, the CS470xx firmware modules can be thought of as blocks of several 32-bit registers (variables) that either control the behavior of the firmware or store information about the state of the firmware at the time of operation. Each register has a unique *index*. Access to the register involves a combination of a specified *opcode* for that firmware module together with the register index. For each firmware module, the following opcodes are available:

- Write Opcode—Issues a command to write to a specific module.
- Read Opcode—Issues a command to read from a specific module.
- Read-response Opcode—Indicates the module and index that have been read.

These available opcodes permit the following types of communication with the CS470xx DSP:

- Writing to the DSP
- Solicited read from the DSP
- Unsolicited read from the DSP

3.1.1 Writing to the DSP

A write session with the CS470xx consists of one 8-byte message from the host to the CS470xx. The write message consists of a 32-bit *command word* followed by a 32-bit *data word* (that is, data to be written to the register). The command word is formed by combining the write opcode for that module with the index of the register that needs to be written. The 32-bit data word is the value of the data intended to fill that register.

Fig. 3-1 shows the format of a write message:

Write Command Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OPCODE[31:16]																INDEX[15:0]															

Write Data Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
DATA WORD[31:0]																															

Figure 3-1. Write Command and Write Data Words

3.1.2 Solicited Read

A solicited read can be thought of as a request to read the contents of a specific register. A solicited read is composed of a 32-bit solicited *read-command word*, which is a request to read a specific index (register) in a given module or read up to sixteen consecutive indices. The DSP, upon receiving this message, responds by sending back a 32-bit *read-response* opcode and the requested 32-bit data word(s) contained in each of the indices read.

Fig. 3-2 provides the format of a solicited read message:

Read Command Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OPCODE[31:16] (Bits 31:24 = Module ID+0x80, bits 23:20 = 0xc, bits 19:16 = <num of indices – 1>)																INDEX[15:0] (First index to be read)															

Figure 3-2. Read Command Data Word

Fig. 3-3 provides the format of a solicited read message:

Read-Response Command Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OPCODE[31:16] (Bits 31:24= Module ID, Bits 23:20 =0xc, Bits 19:16= <num of indices – 1>)																INDEX[15:0] (First index to be read)															

Read-Response Data Word(s):

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
DATA WORD[31:0]																															

Figure 3-3. Read-Response Command and Read-response Data Words

3.1.3 Unsolicited Message

The DSP needs to inform the host when the PLL is out of lock or there is a run-time memory allocation error (malloc failure). This type of message is considered an unsolicited message because it was initiated by the CS470xx rather than the host.

This message comes from the CS470xx to indicate a change in the system that must be addressed. The 8-byte unsolicited read messages from the CS470xx consists of a 4-byte read command word, which defines the type of unsolicited message, and an associated 4-byte data word that contains more information describing a system condition. When the IRQ pin for the port being used goes low (SCP1_IRQ or PCP_IRQ), the host senses that an unsolicited message is ready to be read. Every time a message is detected, the host reads out the 8-byte unsolicited read message.

4 Operating System (OS) Firmware Module

Unsolicited Read Command Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
OPCODE[31:16]																INDEX[15:0]															

Unsolicited Read Data Word:

31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
DATA WORD[31:0]																															

Figure 4-1. Unsolicited Read Command and Data Words

Table 4-1 describes the API used to control the OS firmware module. Indices of the Firmware Module can differ in properties that are important to the system firmware programmer.

Variables marked by a '+' can be modified after kick-starting the application. However, variables **NOT** marked by a '+' must be configured by the system host controller **before** the kick-start message is sent to begin decoding. For these indices, changes after kick-starting the application do not have the desired effect and can potentially cause the application to become unstable.

All indices are re-initialized to the default values after downloading the overlay and soft-resetting the overlay.

Index = 0xHHHH, data value = 0xhhhhhhh

Write = 0x8100HHHH 0xhhhhhhh

Read Request = 0x81C0HHHH

Read Response = 0x01C0HHHH 0xhhhhhhh

Table 4-1. OS Firmware Manager

Index	Variable	Description
0x0000	KICKSTART	Bit 16: 0/1 Disable/enable malloc failure reporting. Bit 13: 0/1 Disable/enable continual GPIO updating. Only applicable if Bit 12 is set. If Bit 12 is disabled, audio pins are be available. Bit 12: 0/1 Disable/enable GPIO updates. Bit 9: 0/1 Disable/enable hardware watchdog timer reload. Bit 8: 0/1 Disable/enable hardware watchdog timer. When Bit 8 is set, the hardware watchdog timer is enabled. When the watchdog timer is enabled, the timer with the initial set value starts decrementing, and when it reaches zero, it stops decrementing and resets the hardware. Every 16 audio samples, there is an option to reload the watchdog timer, controlled by bit 9. If bit 9 is set, a watchdog timer reload does not take place. Otherwise, the counter is reloaded with the set value every 16 audio samples. Bit 0: Kick-start: Set to 1 to trigger kick-start Default = 0x00000000
0x0001	IO_CONFIG	See Section 4.2 for the details of this index.
0x0002	OUTPUT_MODE_CONTROL†	Bits 7:4 Dual Mono Mode (valid only if input mode is 0x0000) 0x0 = Stereo Mode => Center_out = None Left_out = Left_in Right_out = Right_in 0x1 = Left Mono => Center_out = Left_in Left_out = None Right_out = None 0x2 = Right Mono => Center_out = Right_in Left_out = None Right_out = None 0x3 = Mixed Mono => Center_out = (Lin+Rin)/2 Left_out = None Right_out = None For non-zero values (1,2 or 3) in bits 7:4 of the OUTPUT_MODE_CONTROL variable, values in bits 3:0 are ignored. Dual mono mode selection is available only if input mode is 0, that is for dual mono streams. Bits 3:0 Output Mode (number of speakers present in the system) 0x0 = 2/0 Lt, Rt Dolby Surround compatible 0x1 = 1/0 C 0x2 = 2/0 L/R If the output mode is set to 0x02 and Dolby decoding is also set, then the output is Lt/Rt or Lo/Ro depending on the setting of the AC3 Manager STEREO_MODE_CONTROL. See AN333DA for more information. 0x3 = 3/0 L/C/R 0x4 = 2/1 L/R/S 0x5 = 3/1 L/C/R/S 0x6 = 2/2 L/R/Ls/Rs 0x7 = 3/2 L/C/R/Ls/Rs 0x8 = 3/3 L/C/R/Ls/Rs/Cs 0x9 = 3/4 L/C/R/Ls/Rs/Sbl/Sbr 0xA = 2/3 L/R/Ls/Rs/Cs 0xB = 2/4 L/R/Ls/Rs/Sbl/Sbr Default = 0x00000007

Table 4-1. OS Firmware Manager (Cont.)

Index	Variable	Description
0x0003	SAMPLE_RATE†	The host must set the sample rate variable to inform firmware modules of the sample rate. Some firmware modules use this information to calculate correct coefficients or use the correct table data. The actual sample rate is determined by the DAO_LRCLK, which can be configured to be master or slave. If the DAO_LRCLK is master, the sample_rate can be set using the DAO clock dividers. See the <i>CS470xx Hardware User's Manual</i> for more information. Bits 3:0 Sample Rate 0x0 = 48 kHz 0x1 = 44.1 kHz 0x2 = 32 kHz 0x3 = Reserved 0x4 = 96 kHz 0x5 = 88.2 kHz 0x6 = 64 kHz 0x7 = Reserved 0x8 = 24 kHz 0x9 = 22.05 kHz 0xA = 16 kHz 0xB = Reserved 0xC = 192 kHz 0xD = 176.4 kHz 0xE = 128 kHz 0xF = Reserved Default = 0x00000000 (48 kHz)
0x0004 – 0x0008	Reserved	Reserved
0x0009	SOFTBOOT†	Bit 4: 1 = Engage low-power mode. Bit 0: 0/1 disable/initiate soft boot sequence. After a soft boot is initiated, the OS sends a 0x00000005 (SOFT_BOOT_ACK) to the host. The host can then use the standard boot protocol to download one or more overlays. After a soft boot is initiated, the OS will respond to boot protocol messages only. The bit is reset to 0 after the soft boot is complete. Default = 0x00000000
0x000A – 0x003A	Reserved	Reserved
0x003B	GPIO_D	GPIO data register. Bits 31:0 Bit[i] corresponds to pin GPIO[i] (i=0,...,31). Both the GPIO_OE and GPIO_MUX must be set to 1 for a particular bit before that bit can be written. Bit 13 and 12 of KICKSTART variable must be set to 1(enabled).
0x003C	GPIO_OE	GPIO data direction register. Bits 31:0 When Bit[i] is 1, pin GPIO[i] is configured as an output. When Bit[i] is 0, pin GPIO[i] is configured as an input. (i=0,...,31).
0x003D	GPIO_MUX	GPIO MUX Selector register. Bits 31:0 When Bit[i] is 1, pin GPIO[i] is a GPIO function. When Bit[i] is 0, pin GPIO[i] is overwritten by the other function on that pin. Also, when Bit[i] is 0, Bit[i] of the GPIO_D register is not writable
0x003E – 0x0043	Reserved	Reserved

Table 4-1. OS Firmware Manager (Cont.)

Index	Variable	Description
0x0044	PLL_STANDARD_CONFIG	Bits 11:4 Reference Clock Frequency is the frequency of clock attached to XTI pin, must be set: 0x00 = 12.288 MHz 0x01 = 24.576 MHz 0x02–0x0F = Reserved 0x10 = 18.432 MHz 0x11 = 27 MHz 0x12–0xFF = Reserved Bits 3:0 DSP core speed: 0x0 = Custom speed. 0x1 = 101 MHz (Max Ambient Temperature = 105° C) 0x3 = Reserved 0x5 = 152 MHz (Max Ambient Temperature = 85° C) 0x2, 0x4, 0x6–0xF = Reserved Default = 0x00000011
0x0045	PLL_CUSTOM_CONFIG0	Bits 31:0 PLL Custom Configuration 0: 0x00002402 - 11.2896 MHz - 101 Core Speed 0x00002B02 - 11.2896 MHz - 122 Core Speed 0x00002302 - 11.2896 MHz - 130 Core Speed 0x00002802 - 11.2896 MHz - 152 Core Speed 0x00002002 - 12.288 MHz - 130 Core Speed 0x00001502 - 18.432 MHz - 130 Core Speed 0x80000000 - 24.576 MHz - 130 Core Speed 0x74000000 - 27.000 MHz - 130 Core Speed PLL1_CUSTOM_CONFIG0: Setting of fract_in in register CLKREG9 of PLL1 (fract_in is in 1.31 unsigned fractional format, range: 1.000 to 1.9999....) $VCO1_CLK = fract_in * 32 * REF_CLK$
0x0046	PLL_CUSTOM_CONFIG1	Bits 31:0 PLL Custom Configuration 1: 0x00000333 - 101 or 122 Core Speed 0x00000233 - 130 Core Speed PLL1_CUSTOM_CONFIG1 Setting of CLKREG17 register of PLL1 Setting of OVFS_MUX, HCLK_MUX, OVFS_DIV1, OVFS_DIV2, HCLK_DIV for the DSP Clock and I2S_OVFS Clock. OVFS_MUX selects divided VCO_CLK for I2S_OVFS_CLK, else it is REF_CLK. HCLK_MUX selects divided VCO_CLK for DSP_HCLK, else it is REF_CLK. $I2S_OVFS_CLK = VCO_CLK / (2 * (OVFS_DIV1+1) * (OVFS_DIV2 + 1))$ $DSP_CLK = VCO_CLK / (2 * (HCLK_DIV+1))$
0x0047 – 0x004E	Reserved	Reserved
0x004F	SW_NUM_CHANS	Number of software audio channels to be supported in OS I/O buffers. Bits 5:0 Number of channels. Maximum supported is 16. Default: 0x00000008
0x0050 – 0x0054	Reserved	Reserved
0x0055	MALLOC_SUCCESS_AND_ATTEMPT_COUNTS	Bits 31:16 Number of successful memory allocations. Bits 15:0 Number of memory allocation attempts.
0x0056 – 0x0058	Reserved	Reserved

Table 4-1. OS Firmware Manager (Cont.)

Index	Variable	Description
0x0059	SCP_CONTROL	Post pre-kick-start mode of SCP communication Bits 2 1 0 0 0 0 => I2C Master (Supported for firmware versions V01, V03 only) 0 0 1 => SPI Master (Supported for firmware versions V01, V03 only) 1 0 0 => I2C Slave 1 0 1 => SPI Slave Default: 0x00000000
0x005D	PLL1_CUSTOM_CONFIG2	Setting of CLKREG19 register of PLL1 Setting of PLL_DIV_FF for ADC_DAC_CLK $ADC_DAC_CLK = VC01_CLK / PLL1_DIV_FF$
0x005E	PLL2_CUSTOM_CONFIG0	Setting of fract_in in register CLK2REG9 of PLL2 (fract_in is in 1.31 unsigned fractional format Range: 1.000 to 1.9999....) $VCO2_CLK = fract_in * 32 * REF_CLK$
0x005F	PLL2_CUSTOM_CONFIG1	Setting of CLK2REG17 register of PLL2 Setting OVFS_MUX, OVFS_DIV1, OVFS_DIV2, for SPDIFRX_OVFS Clock. OVFS_MUX selects divided VCO_CLK for SPDIFRX_OVFS_CLK, else it is REF_CLK. $SPDIFRX_OVFS_CLK = VCO_CLK / (2 * (OVFS_DIV1+1) * (OVFS_DIV2 + 1))$ $DSP_CLK = VCO_CLK / (2 * (HCLK_DIV+1))$
0x0060	PLL2_CUSTOM_CONFIG2	Setting of CLK2REG18 of PLL2 Selects VCO1 or VCO2 source for HCLK, I2S_OVFS_CLK, and SPDIF_RX_OVFS_CLK. Also sets divider value for SRC_CLK $SRC_CLK = SPDIF_RX_OVFS_CLK / (SRC_CLK_DIV + 1)$
0x006D	ADC_USER_MODES	Setting of ADC_USER_MODE. Bits [18:9] can be changed during runtime. Bits 0:3 ADC_ENABLE for ADCs 1 Enable 0 Disable Bit 4 1 Enables single-ended operation for all ADCs 0 Differential operation for all ADCs Bit 5:8 Reserved Bits 9:13 MUX_SELECT_CH2-ADC 0x01 AIN2A 0x02 AIN3A 0x04 AIN4A 0x08 AIN5A 0x10 AIN6A Bits 14:18 MUX_SELECT_CH3-ADC 0x01- AIN2B 0x02- AIN3B 0x04- AIN4B 0x08- AIN5B 0x10- AIN6B Bit 19:31 Reserved Default: 0x0000 423F
0x006E	DAC_USER_MODES	Bits 3:0 are the DAC_ENABLES (1 = enabled) Bit 0 = DAC outputs AOUT_1 and AOUT_2 Bit 1 = DAC outputs AOUT_3 and AOUT_4 Bit 2 = DAC outputs AOUT_5 and AOUT_6 Bit 3 = DAC outputs AOUT_7 and AOUT_8 Other bits are reserved and set to 0, except bits 23 and 24 are reserved and set to 1.
0x006F	Reserved	Reserved

Table 4-1. OS Firmware Manager (Cont.)

Index	Variable	Description
0x0070	DACSRC_FSI_SEL	Bits 31:2 Reserved Bits 1:0 FSI Select: 0x0 - FSI = SPDIFRX_LRCLK 0x1 - FSI = DAI1_LRCLK 0x2 - FSI = DAO1_LRCLK (default) 0x3 - Reserved When output APBSRC is enabled, it must be ensured that DACSRC_FSI_SEL and OUTPUT_APBSRC_FSI_SEL is the same which could come from either DAI_LRCLK or SPDIFRX_LRCLK. When output APBSRC is not enabled, variable OUTPUT_APBSRC_FSI_SEL is irrelevant, however DACSRC_FSI_SEL must be set to 2 (DAO1_LRCLK). Default = 0x0000 0002
0x0071	OUTPUT_APBSRC_FSI_SEL	Bits 31:1 Reserved Bit 0 FSI Select: 0x0 - FSI = SPDIFRX_LRCLK 0x1 - FSI = DAI1_LRCLK 1. When output APBSRC is enabled, it must be ensured that DACSRC_FSI_SEL and OUTPUT_APBSRC_FSI_SEL is the same which could come from either DAI_LRCLK or SPDIFRX_LRCLK. 2. When output APBSRC is not enabled, variable OUTPUT_APBSRC_FSI_SEL is irrelevant, however DACSRC_FSI_SEL must be set to 2 (DAO1_LRCLK). Default = 0x0000 0000
0x0074	PCM_MANUAL_CONFIG	0/1: Manually Disable/Enable PCM. Autodetect will not have any effect if this is enabled Default: 0x00000000
0x0075	PCM_AUTOSWITCH_CONFIG	Bit 0 0/1 Disable/Enable automatic switching to/from PCM Decoder. Notes: 1) Autodetect must be enabled to use this feature. 2) Valid for Stereo I ² S or SPDIF compressed IO_CONFIG values ONLY." 3) PCM Manager must be enabled to use this feature. 4) If IO_CONFIG is PCM in through SPDIF-RX, Output APBSRC must be enabled. Default: 0x00000001
0x0076	AUTODETECT_CONFIG	Bit 2 0/1 Disable/Enable Audio Configuration Change Notification (ACCN). Bit 1 0/1 Disable/Enable bypassing of autodetection at application restart. Bit 0 0/1 Disable/Enable autodetection Default = 0x00000001
0x0077	PCM_AUTODETECT_SILENCE_THRESHOLD	Bits 31:0 Number of samples (Left+Right) of silence upon which the DSP will declare Silence while having detected and currently playing PCM (Autodetect is enabled). Valid for all decoders when configured for PCM pass-through and auto switch. It is recommended that system designers set this value large enough to avoid inter-track silence from PCM compact discs. Default = 0x00017700 (The default allows for 1 sec of inter-track silence at 48 KHz).
0x0078	SPDIF_RX_STATUS	S/PDIF Rx Lock: 0x00000040 S/PDIF Rx Unlock: 0x00000041

4.1 Memory Configurations for IO_CONFIG (Index 0x0001)

Table 4-2 shows the memory configurations for IO_CONFIG.

Table 4-2. Memory Configurations for IO_CONFIG (Index 0x0001)

Firmware Version	Memory Configurations			
V01	P8	P10	P12	P14
V03	P8	P10	P12	P14
V05	—	—	—	P14
V07	P8	—	—	—

Table 4-2. Memory Configurations for IO_CONFIG (Index 0x0001)

Firmware Version	Memory Configurations			
V09	—	—	P12	—
V11	—	P10	—	—
V13	—	—	P12	—

4.2 Details of Index 0x0001

Table 4-3. IO_CONFIG Bits 15:0 (Index 0x0001)

Input Configuration (IO_CONFIG Bits 15:0)	Firmware Version						
0001 8-ch I ² S PCM	V01	V03	V05	V07	V09	V11	V13
0002 2-ch I ² S PCM	V01	V03	V05	V07	V09	V11	V13
0004 8-ch I ² S PCM with SRC ¹	V01	V03	V05	V07	V09	V11	V13
0008 2-ch I ² S PCM with SRC ¹	V01	V03	V05	V07	V09	V11	V13
0010 ADC + 2-ch I ² S PCM with SRC ¹	V01	V03	—	—	—	—	—
0020 Reserved	—	—	—	—	—	—	—
0040 Reserved	—	—	—	—	—	—	—
0080 Reserved	—	—	—	—	—	—	—
0100 I ² S Compressed	—	—	V05	V07	V09	V11	V13
0200 S/PDIF Compressed	—	—	V05	V07	V09	V11	V13
0400 2-ch ADC + 10-ch I ² S PCM	V01	V03	—	—	—	—	—
0800 ADC + 8-ch I ² S PCM	V01	V03	—	—	—	—	—
1000 ADC	V01	V03	V05	V07	V09	V11	V13
2000 S/PDIF PCM	V01	V03	V05	V07	V09	V11	V13
4000 ADC + S/PDIF PCM	V01	V03	—	—	—	—	—
8000 ADC + 8-ch I ² S + S/PDIF- PCM	V01	V03	—	—	—	—	—

1. With these configurations, you cannot select DAO with Output SRC.

Table 4-4. IO_CONFIG Bits 31:16 (Index 0x0001)

Output Configuration (IO_CONFIG Bits 31:16)	Firmware Version						
0001 DAC Output	V01	V03	V05	V07	V09	V11	V13
0010 8-ch I ² S PCM	V01	V03	V05	V07	V09	V11	V13
0100 DAO2 S/PDIF PCM Only	V01	V03	—	—	—	—	—
1000 8-ch I ² S with SRC	V01	V03	—	—	—	—	—
2000 Auxiliary ADC Input ¹	—	—	—	V07	—	V11	V13

1. Supported only for stereo PCM/compressed configurations. For LO I/O configurations 0002, 0200, 0100, and 2000.

Table 4-5. Input Configurations versus Slot index for Setting Up Input Channel Remap

Configurable Input Channel Map	PCM Manager Index	Input Port	IO_BUFFER_SOURCE
Bits 31:16 I/O Configuration 20xx: Additional ADC Input	9	ADC-0	8
	10	ADC-1	9
	11	ADC-2	10
	12	ADC-3	11

Table 4-5. Input Configurations versus Slot index for Setting Up Input Channel Remap (Cont.)

Configurable Input Channel Map	PCM Manager Index	Input Port	IO_BUFFER_SOURCE
Bits 15:0 I/O Configuration 0001: 8-ch DAI/I2S PCM 0004: 8-channel DAI/I2S PCM with SRC	1	DAI0 left subframe word	0
	2	DAI0 right subframe word	1
	3	DAI1 left subframe word	2
	4	DAI1 right subframe word	3
	5	DAI2 left subframe word	4
	6	DAI2 right subframe word	5
	7	DAI3 left subframe word	6
	8	DAI3 right subframe word	7
Bits 15:0 I/O Configuration 0002: 2-channel DAI/I2S PCM 0100: 2-channel DAI/I2S PCM 0008: 2-channel DAI/I2S PCM with SRC	1	DAI4 left subframe word	0
	2	DAI4 right subframe word	1
Bits 15:0 I/O Configuration 0010: 4-channel channel ADC Input + 2-CH I2S with SRC	1	ADC1 left channel	0
	2	ADC1 right channel	1
	3	ADC2 left channel	2
	4	ADC2 right channel	3
	5	DAI0 left subframe word	4
	6	DAI0 right subframe word	5
Bits 15:0 I/O Configuration 1000: 4-channel channel ADC Input	1	ADC1 left channel	0
	2	ADC1 right channel	1
	3	ADC2 left channel	2
	4	ADC2 right channel	3
Bits 15:0 I/O Configuration 2000: 2-channel S/PDIF Rx Input 0200: 2-channel S/PDIF Rx Input	1	DAI0 left subframe word (S/PDIF Rx recovered through DAI0)	0
	2	DAI0 right subframe word (S/PDIF Rx recovered through DAI0)	1
Bits 15:0 I/O Configuration 4000: 4-channel ADC + 2-channel S/PDIF Rx Input	1	ADC1 left channel	0
	2	ADC1 right channel	1
	3	ADC2 left channel	2
	4	ADC2 right channel	3
	5	DAI0 left subframe word (S/PDIF Rx recovered through DAI0)	4
	6	DAI0 right subframe word (S/PDIF Rx recovered through DAI0)	5

Table 4-5. Input Configurations versus Slot index for Setting Up Input Channel Remap (Cont.)

Configurable Input Channel Map	PCM Manager Index	Input Port	IO_BUFFER_SOURCE
Bits 15:0 I/O Configuration 8000: 4-channel ADC + 8-channel DAI/I ² S Input + 2-channel S/PDIF Rx Input	1	ADC1 left channel	0
	2	ADC1 right channel	1
	3	ADC2 left channel	2
	4	ADC2 right channel	3
	5	DAI1 left subframe word	4
	6	DAI1 right subframe word	5
	7	DAI2 left subframe word	6
	8	DAI2 right subframe word	7
	9	DAI3 left subframe word	8
	10	DAI3 right subframe word	9
	11	DAI4 left subframe word	10
	12	DAI4 right subframe word	11
	13	DAI0 left subframe word (S/PDIF Rx recovered through DAI0)	12
	14	DAI0 right subframe word (S/PDIF Rx recovered through DAI0)	13
Bits 15:0 I/O Configuration 0800: 4-channel ADC + 8-channel DAI/I ² S Input	1	ADC1 left channel	0
	2	ADC1 right channel	1
	3	ADC2 left channel	2
	4	ADC2 right channel	3
	5	DAI0 left subframe word	4
	6	DAI0 right subframe word	5
	7	DAI1 left subframe word	6
	8	DAI1 right subframe word	7
	9	DAI2 left subframe word	8
	10	DAI2 right subframe word	9
	11	DAI3 left subframe word	10
	12	DAI3 right subframe word	11

Table 4-5. Input Configurations versus Slot index for Setting Up Input Channel Remap (Cont.)

Configurable Input Channel Map	PCM Manager Index	Input Port	IO_BUFFER_SOURCE
Bits 15:0 I/O Configuration 0400: 2-channel ADC + 10-channel DAI /I ² S Input	1	ADC2 left channel	0
	2	ADC2 right channel	1
	3	DAI0 left subframe word	2
	4	DAI0 right subframe word	3
	5	DAI1 left subframe word	4
	6	DAI1 right subframe word	5
	7	DAI2 left subframe word	6
	8	DAI2 right subframe word	7
	9	DAI3 left subframe word	8
	10	DAI3 right subframe word	9
	11	DAI4 left subframe word	10
	12	DAI4 right subframe word	11

4.3 OS Manager in DSP Composer

Most configuration information described in [Section 4](#) can be controlled in DSP Composer. The OS Manager indices are available in the Audio In, Audio Out, and System blocks. To insert these, simply drag the Audio In, Audio Out, and System blocks to the workspace. When the Audio In, Audio Out, and System blocks are on the workspace, the pre-kick and run-time controls are accessible by double-clicking in the corresponding blocks. The controls are adjustable during run-time to interact with the DSP in a similar way as would a host microcontroller in an actual system. [Fig. 5-2](#) shows that when you initially drag the Audio In block onto the workspace, the Audio In Device Properties automatically pops up, prompting to the user to select the input source and data format. This is also accessible by right-clicking the Audio In block.

4.4 Unsolicited Messages

Index = 0xHHHH, data value = 0xhhhhhhh

No Write Message. No Read Request.

Unsolicited Read Response = 0x8100HHHH 0xhhhhhhh

Table 4-6. Unsolicited Messages

Index	Message	Description
0x0000	MALLOC_FAILURE	Bits 19:16 1 = MALLOC_ERROR_REQ_LIST_OVERFLOW—too many requests. 2 = MALLOC_ERROR_NO_FREE_BLOCK—no non-modulo free block was available to service next request) 3 = MALLOC_ERROR_NO_MOD_FREE_BLOCK—no modulo free block was available to service next request) Message= SPDIF_LOCK_UNLOCK Bits 6:0 SPDIF LOCKED/SPDIF UNLOCKED unsolicited messages are applicable only if IO_CONFIG bits 15:0 are set to 0x2000 or 0x02000. 0x40 SPDIF LOCKED 0x41 SPDIF UNLOCKED
0x0002	PLL_OUT_OF_LOCK	Bit 23 1 Bits 22:0 Reserved.

4.4.1 Autodetection

Index = 0xHHHH, data value = 0xhhhhhhh

No Write Command.

No Read Request Command.

Unsolicited Read Response = 0x8100HHHH 0xhhhhhhh

Table 4-7. Autodetect Messages

Index	Variable	Description
0x0000	AUTODETECT_RESPONSE	Bit 31 = Decodable_Stream_Flag= 0/1 = This stream is not/is decodable by the application (no need for new download if 1). Bit 5 Non_IEC61937_Stream_Flag= 1/0 = This stream is not/is IEC61937 compressed data. If Non_IEC61937_Stream_Flag=1 Bits [4:0] = Non_IEC61937 Stream Descriptor. 0x00 = Silent Input Data (Out of Application Sync). 0x01 = DTS Format-16 elementary stream. 0x02 = DTS Format-14 elementary stream. 0x03 = Linear PCM stream. 0x04 = HDCD PCM Sync Detect (only available in HDCD application). 0x05 = HDCD PCM Sync Lost (only available in HDCD application). If Non_IEC61937_Stream_Flag=0 Bits [4:0] = IEC61937 Stream Descriptor = Identical to bits [4:0] of the Pc burst data-type descriptor in IEC61937 specification. Description of the data-type field of Pc reproduced below from IEC61937 Specification (current as of 11/97): 0x00 = Never Reported. 0x01 = AC-3 data. 0x03 = Never Reported. 0x04 = MPEG-1 Layer 1 data. 0x05 = MPEG-1 Layer 2 or 3 data or MPEG-2 without extension. 0x06 = MPEG-2 data with extension. 0x07 = MPEG-2 AAC ADTS data. 0x08 = MPEG-2 Layer 1 Low sampling frequency. 0x09 = MPEG-2 Layer 2 or 3 Low sampling frequency. 0x0B = DTS-1 data (512-sample bursts). 0x0C = DTS-2 data (1024-sample bursts). 0x0D = DTS-3 data (2048-sample bursts). 0x0E - 0x1B = Reserved. 0x1C = MPEG-2 AAC ADTS data.

5 Audio Manager Firmware Module

The Audio Manager Firmware module provides the ability for the microcontroller to easily manage general audio controls such as gain, mute, trim and channel remap.

Index = 0xHHHH, data value = 0xhhhhhhh

Write = 0x8300HHHH 0xhhhhhhh

Read Request = 0x83c0HHHH;

Read Response = 0x03c0HHHH 0xhhhhhhh

Table 5-1. Audio Manager

Index	Variable	Description
0x0000	GAIN†	0x00000000-0x7FFFFFFF (-inf. to +24 dB). Overall System Gain. Signed value with decimal point to the right of bit 27. Range is zero to (16-2 ²⁷). Negative values can be used to invert the phase of all the outputs. Default = 0x08000000 (+0 dB)
0x0001	MUTE†	0/1 = Unmute/Mute Audio Default = 0x00000000 (unmuted)
0x0002	CHAN_0_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 0 (Left Channel) Default = 0x80000000
0x0003	CHAN_1_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 1 (Center Channel) Default = 0x80000000
0x0004	CHAN_2_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 2 (Right Channel) Default = 0x80000000
0x0005	CHAN_3_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 3 (Left Surround Channel) Default = 0x80000000
0x0006	CHAN_4_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 4 (Right Surround Channel) Default = 0x80000000
0x0007	CHAN_5_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 5 (Left Surround Back Channel) Default = 0x80000000
0x0008	CHAN_6_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 6 (Right Surround Back Channel) Default = 0x80000000
0x0009	CHAN_7_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 7 (LFE0 Channel) Default = 0x80000000
0x000A	CHAN_8_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 8 (Left DualZone Channel) Default = 0x80000000
0x000B	CHAN_9_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 9 (Right DualZone Channel) Default = 0x80000000
0x000C	CHAN_10_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 10 (Left Auxiliary Channel) Default = 0x80000000
0x000D	CHAN_11_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 11 (Right Auxiliary Channel) Default = 0x80000000
0x000E	CHAN_12_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 12 (Application Dependent Channel) Default = 0x80000000

Table 5-1. Audio Manager (Cont.)

Index	Variable	Description
0x000F	CHAN_13_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 13 (Application Dependent Channel) Default = 0x80000000
0x0010	CHAN_14_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 14 (Left Downmix Channel) Default = 0x80000000
0x0011	CHAN_15_TRIM†	0x00000000 – 0x80000000 (0.0 to 1.0) Volume trim for channel 15 (Right Downmix Channel) Default = 0x80000000
0x0012	DAO1_DATA0_L_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 0. A single internal channel may be mapped to multiple outputs. Default = 0x00000000 (Left Channel Audio Data)
0x0013	DAO1_DATA0_R_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 1. A single internal channel may be mapped to multiple outputs. Default = 0x00000002 (Right Channel Audio Data)
0x0014	DAO1_DATA1_L_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 2. A single internal channel may be mapped to multiple outputs. Default = 0x00000003 (Left Surround Channel Audio Data)
0x0015	DAO1_DATA1_R_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 3. A single internal channel may be mapped to multiple outputs. Default = 0x00000004 (Right Surround Channel Audio Data)
0x0016	DAO1_DATA2_L_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 4. A single internal channel may be mapped to multiple outputs. Default = 0x00000001 (Center Channel Audio Data)
0x0017	DAO1_DATA2_R_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 5. A single internal channel may be mapped to multiple outputs. Default = 0x00000007 (LFE Channel Audio Data)
0x0018	XMT_LEFT_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 6. A single internal channel may be mapped to multiple outputs. Default = 0x00000005 (Left Surround Back Channel Audio Data)
0x0019	XMT_RIGHT_REMAP	Selects which internal channel (0-15) is routed to DAO1 channel 7. A single internal channel may be mapped to multiple outputs. Default = 0x00000006 (Right Surround Back Channel Audio Data)
0x001A	DAC1_DATA0_L_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 0. A single internal channel may be mapped to multiple outputs. Default = 0x00000000 (Left Channel Audio Data)
0x001B	DAC1_DATA0_R_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 1. A single internal channel may be mapped to multiple outputs. Default = 0x00000002 (Right Channel Audio Data)
0x001C	DAC1_DATA1_L_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 2. A single internal channel may be mapped to multiple outputs. Default = 0x00000003 (Left Surround Channel Audio Data)
0x001D	DAC1_DATA1_R_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 3. A single internal channel may be mapped to multiple outputs. Default = 0x00000004 (Right Surround Channel Audio Data)
0x001E	DAC1_DATA2_L_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 4. A single internal channel may be mapped to multiple outputs. Default = 0x00000001 (Center Channel Audio Data)
0x001F	DAC1_DATA2_R_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 5. A single internal channel may be mapped to multiple outputs. Default = 0x00000007 (LFE Channel Audio Data)

Table 5-1. Audio Manager (Cont.)

Index	Variable	Description
0x0020	XMT_LEFT_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 6. A single internal channel may be mapped to multiple outputs. Default = 0x00000005 (Left Surround Back Channel Audio Data)
0x0021	XMT_RIGHT_REMAP	Selects which internal channel (0-15) is routed to DAC1 channel 7. A single internal channel may be mapped to multiple outputs. Default = 0x00000006 (Right Surround Back Channel Audio Data)
0x0022	CONTROL_WORD	Bit 28: 0/1 Disable/Enable Apply Swapping Bit 4: 0/1 Disable/Enable Apply Remap Bit 0: 0/1 Disable/Enable Apply Gain Default = 0x10000011


5.1 Audio Manager in DSP Composer Environment

DSP Composer can control all configuration information described in [Section 5](#). The Audio Manager is included with the (SPP) Standard Post Processing Overlay as well as the (APP) Advanced Post Processing Overlay Post Processing Modules. To insert the Audio Manager, drag the Post Processing Modules folder to the workspace and select either SPP or APP. Once the SPP or APP Module is on the workspace the run-time controls for Audio Manager can be accessed by double-clicking the SPP or APP Module. The run-time control for the Audio Manager Module is shown in [Fig. 5-1](#).


Figure 5-1. DSP Composer Audio Manager Run-Time Control Panel

5.2 DSP Composer Sample Projects

Sample projects for various firmware applications have been provided in DSP Composer. Go to *File > Open* and browse to >CirrusDSP\CS470xx\projects\. There are several sample projects. Open 'adc_in_dac_out.cpa', which is configured for PCM processing as shown in [Fig. 5-2](#).

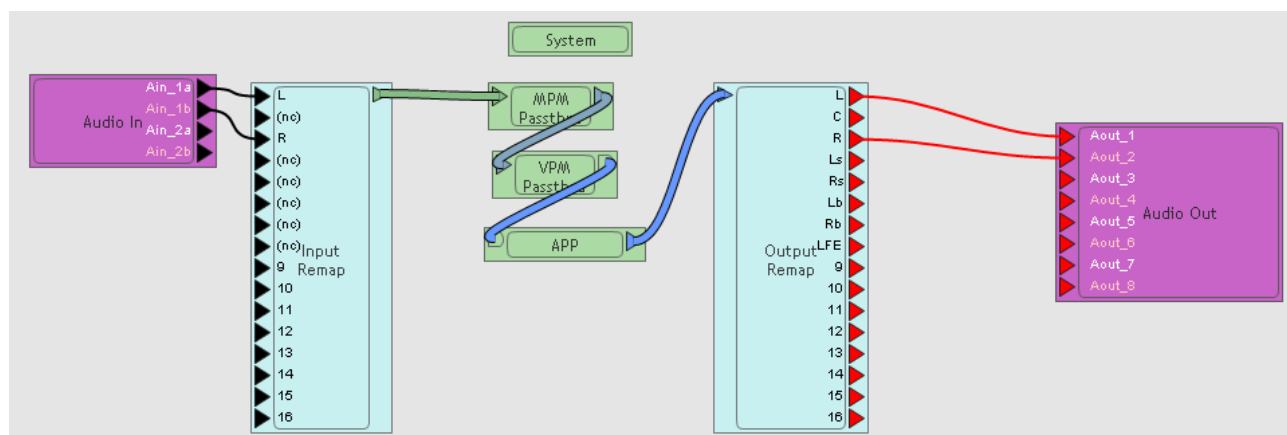
Figure 5-2. Sample Project

6 PCM Firmware Module

The PCM firmware module provides routing and control functions for stereo and multichannel PCM input. The PCM firmware is co-resident with the OS module. There are two main modes of PCM operation, stereo and multichannel.

6.1 PCM Manager

Index = 0xHHHH, data value = 0xhhhhhhhh

Write = 0x9B00HHHH 0xhhhhhhhh

Read Request = 0x9BC0HHHH;

Read Response = 0x1BC0HHHH 0xhhhhhhhh

Table 6-1. PCM Manager

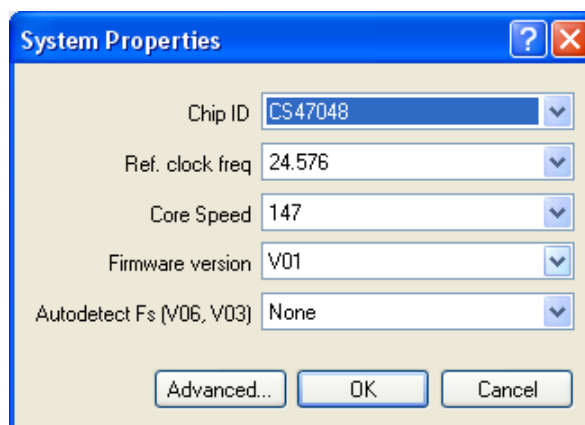
Index	Variable	Description
0x0000	PCM_ENABLE	Bit 8 = Disable/enable decimator (down sampler) = 0/1 This setting is valid for stereo and multichannel PCM inputs. When the decimator (downsampler) is enabled, set SAMPLE_RATE (index 0x03) in OS Manager as follows: 0 = 96 kHz in 48 kHz out 1 = 88.2 kHz in 44.1 kHz out 2 = 64 kHz in 32 kHz out Bit 4 = Disable/enable de-emphasis = 0/1 Bit 0 = Disable/enable PCM module = 0/1 Default = 0x00000001
0x0001	IO_BUFF_CH0_SOURCE	Input source for channel 0 I/O buffer (Left) (see Table 4-1) Default = 0x00000000 (DAI0 Left)
0x0002	IO_BUFF_CH1_SOURCE	Input source for channel 1 I/O buffer (Center) (see Table 4-1) Default = 0x00000004 (DAI2 Left)
0x0003	IO_BUFF_CH2_SOURCE	Input source for channel 2 I/O buffer (Right) (see Table 4-1) Default = 0x00000001 (DAI0 Right)
0x0004	IO_BUFF_CH3_SOURCE	Input source for channel 3 I/O buffer (Left Surround) (see Table 4-1) Default = 0x00000002 (DAI1 Left)
0x0005	IO_BUFF_CH4_SOURCE	Input source for channel 4 I/O buffer (Right Surround) (see Table 4-1) Default = 0x00000003 (DAI1 Right)
0x0006	IO_BUFF_CH5_SOURCE	Input source for channel 5 Left I/O buffer (Surround Back) (see Table 4-1) Default = 0x00000006 (DAI3 Left)
0x0007	IO_BUFF_CH6_SOURCE	Input source for channel 6 I/O buffer (Surround Back Right) (see Table 4-1) Default = 0x00000007 (DAI3 Right)
0x0008	IO_BUFF_CH7_SOURCE	Input source for channel 7 I/O buffer (LFE0) (see Table 4-1) Default = 0x00000005 (DAI2 Right)
0x0009	IO_BUFF_CH8_SOURCE	Input source for Aux Channel 8 I/O buffer Default = 0x00000000
0x000A	IO_BUFF_CH9_SOURCE	Input source for Aux Channel 9 I/O buffer Default = 0x00000000
0x000B	IO_BUFF_CH10_SOURCE	Input source for Aux Channel 10 I/O buffer Default = 0x00000000

Table 6-1. PCM Manager (Cont.)


Index	Variable	Description
0x000C	IO_BUFF_CH11_SOURCE	Input source for Aux Channel 11 I/O buffer Default = 0x00000000
0x000D	Reserved	Reserved
0x000E	PCM_INPUT_MODE	Bit 31: 0/1 Disable/enable LFE processing through PCM input Bits 3:0 Input Mode (number of input channels present in the system) 0x0 = 2/0 Lt, Rt Dolby Surround compatible 0x1 = 1/0 C 0x2 = 2/0 L/R 0x3 = 3/0 L/C/R 0x4 = 2/1 L/R/S 0x5 = 3/1 L/C/R/S 0x6 = 2/2 L/R/Ls/Rs 0x7 = 3/2 L/C/R/Ls/Rs 0x8 = 3/3 L/C/R/Ls/Rs/Cs 0x9 = 3/4 L/C/R/Ls/Rs/Sbl/Sbr 0xA = 2/3 L/R/Ls/Rs/Cs 0xB = 2/4 L/R/Ls/Rs/Sbl/Sbr Default = 0x00000002

6.2 PCM Manager in DSP Composer

All configuration information described in [Section 6.1](#) can be controlled in DSP Composer. I/O buffer channel availability is device specific. The PCM Manager is part of the System block. To insert a System block, drag it onto the workspace. When the System block is on the workspace, the run-time and pre-kick controls for the PCM Manager can be accessed by double-clicking the System block. When the System Block is first dragged onto the workspace, the user is prompted to select device and input mode as seen in [Fig. 6-1](#). These settings can also be accessed by right-clicking the System block and selecting Device Properties.


Figure 6-1. DSP Composer System Block Device Properties

The run-time controls are accessed by double-clicking the System Block as shown in [Fig. 6-2](#).

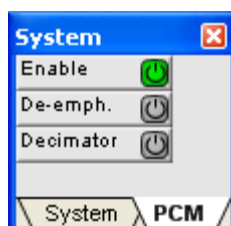
Figure 6-2. DSP Composer PCM Manager Run-Time Controls

6.3 PCM Module Notes

The following are the possible PCM input modes:

- Stereo Mode: Stereo PCM into DAI_D4. 2 Channel Mode set in IO_CONFIG in the OS Manager.
- Multichannel Mode: PCM into DAI_D0–DAI_D3. Multichannel Mode set in IO_CONFIG in the OS Manager.

Stereo and Multichannel input modes above are mutually exclusive and must be configured prior to runtime (pre-kick-start). At runtime, switching between modes is not allowed.

7 Watchdog Timer

The CS470xx has an integrated hardware watchdog timer that acts as a monitor for the DSP. The watchdog timer must be reset by the DSP before the counter expires, or the entire chip is reset. This peripheral ensures that the CS470xx resets itself in the event of a temporary system failure. In standalone mode (that is, no host MCU), the DSP reboots from external FLASH. In slave mode (with host MCU present), all GPIOs are pulled high to signal the host that the watchdog has expired and the DSP should be rebooted and reconfigured. The watchdog timer is disabled on reset. There are three important registers that the host uses for configuring the watchdog timer: KICKSTART, WDG_RELOAD, and WDG_COUNT.

The enabling of the watchdog timer happens post-kick-start.

7.1 Watchdog Timer Messaging

The KICKSTART message that enables the watchdog is set by bit 8 (a = 1). To enable no watchdog re-kicking, set bit 9 as well (a = 3). **No watching with re-kicking is only used as a test hook to verify that the reset occurs when the timer expires.**

Mnemonic	Value
KICKSTART	0x81000000 0x00000a00

The WDG_COUNT message reflects the watchdog state at last-timer ISR. The default is abcdefgh = FFFFFFFF.

Mnemonic	Value
WDG_COUNT	0x81000018 0xabcdefgh

The WDG_RELOAD message is used to set the watchdog reload time. The default is abcdefgh = 00BB800, which is a 1-second reload time at 12.288 MHz.

Mnemonic	Value
WDG_RELOAD	0x81000019 0xabcdefgh

The equation to calculate the watchdog reload time is as follows:

$$\text{Watchdog reload time} = \text{MCLK} / \text{WDG_RELOAD}$$

8 Document Revisions

Revision	Date	Changes
RC1	January 23, 2009	Initial Release
RC2	February 10, 2009	Updated definitions for index 0x0000, KICKSTART and index 0x0001, IO_CONFIG
RC3	March 20m 2009	Updated Table 2-1 . Update indices 0x0000
RC4	June 17, 2009	Updated Index 0x0001, IO_CONFIG in Table 4-1 .
RC5	July 8,2009	Updated Index 0x0001, IO_CONFIG in Table 4-1 .
RC6	October 9, 2009	Fixed typographical errors and reworded paragraph 1 in Section 2.1 .
RC7	April 28, 2010	Added Index 0x006D ADC_USER_MODES
RC8	July 27, 2010	Added SRC support modes in index 0x0001. Added index 0x0070 & 0x0071 for FSI selection control.
RC9	April, 2011	Updated Index 0x0001, IO_CONFIG. Updated Table 4-1 and Table 6-1 , screenshots, and sample project.
RC10	June, 2011	Updated index 0x0044 in Table 4-1 . Also added index 0x0078 to Table 4-1 . Updated index 0x0000 in Table 4-6 .
RC11	September, 2011	Updated 0x006D, 0x006E, and 0x0058 in Table 4-1 , OS Firmware Manager . Revised Table 4-2 through Table 4-5 .

Contacting Cirrus Logic Support

For all product questions and inquiries contact a Cirrus Logic Sales Representative.

To find the one nearest to you go to www.cirrus.com

IMPORTANT NOTICE

Cirrus Logic, Inc. and its subsidiaries ("Cirrus") believe that the information contained in this document is accurate and reliable. However, the information is subject to change without notice and is provided "AS IS" without warranty of any kind (express or implied). Customers are advised to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete. All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, indemnification, and limitation of liability. No responsibility is assumed by Cirrus for the use of this information, including use of this information as the basis for manufacture or sale of any items, or for infringement of patents or other rights of third parties. This document is the property of Cirrus and by furnishing this information, Cirrus grants no license, express or implied under any patents, mask work rights, copyrights, trademarks, trade secrets or other intellectual property rights. Cirrus owns the copyrights associated with the information contained herein and gives consent for copies to be made of the information only for use within your organization with respect to Cirrus integrated circuits or other products of Cirrus. This consent does not extend to other copying such as copying for general distribution, advertising or promotional purposes, or for creating any work for resale.

CERTAIN APPLICATIONS USING SEMICONDUCTOR PRODUCTS MAY INVOLVE POTENTIAL RISKS OF DEATH, PERSONAL INJURY, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE ("CRITICAL APPLICATIONS"). CIRRUS PRODUCTS ARE NOT DESIGNED, AUTHORIZED OR WARRANTED FOR USE IN PRODUCTS SURGICALLY IMPLANTED INTO THE BODY, AUTOMOTIVE SAFETY OR SECURITY DEVICES, LIFE SUPPORT PRODUCTS OR OTHER CRITICAL APPLICATIONS. INCLUSION OF CIRRUS PRODUCTS IN SUCH APPLICATIONS IS UNDERSTOOD TO BE FULLY AT THE CUSTOMER'S RISK AND CIRRUS DISCLAIMS AND MAKES NO WARRANTY, EXPRESS, STATUTORY OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR PARTICULAR PURPOSE, WITH REGARD TO ANY CIRRUS PRODUCT THAT IS USED IN SUCH A MANNER. IF THE CUSTOMER OR CUSTOMER'S CUSTOMER USES OR PERMITS THE USE OF CIRRUS PRODUCTS IN CRITICAL APPLICATIONS, CUSTOMER AGREES, BY SUCH USE, TO FULLY INDEMNIFY CIRRUS, ITS OFFICERS, DIRECTORS, EMPLOYEES, DISTRIBUTORS AND OTHER AGENTS FROM ANY AND ALL LIABILITY, INCLUDING ATTORNEYS' FEES AND COSTS, THAT MAY RESULT FROM OR ARISE IN CONNECTION WITH THESE USES.

Cirrus Logic, Cirrus, the Cirrus Logic logo designs, Cirrus Original Multichannel Surround 2, and DSP Composer are trademarks of Cirrus Logic, Inc. All other brand and product names in this document may be trademarks or service marks of their respective owners.

Dolby, Dolby Digital, Dolby Headphone, Pro Logic, double-D symbols, Audistery are registered trademarks of Dolby Laboratories, Inc. Dolby Virtual Surround is a trademark of Dolby Laboratories, Inc. Supply of an implementation of Dolby Technology does not convey a license nor imply a right under any patent, or any other industrial or Intellectual Property Right of Dolby Laboratories, to use the Implementation in any finished end-user or ready-to-use final product. It is hereby notified that a license for such use is required from Dolby Laboratories.

Cinema Re-EQ is a trademark of Lucasfilm Ltd..

SRS, Circle Surround, SRS TruSurround XT, TruSurround HD4 technologies are incorporated under license from SRS Labs, Inc. The SRS, Circle Surround, SRS TruSurround XT, TruSurround HD4 technology/solution rights incorporated in Cirrus Logic's CS470xx part are owned by SRS Labs, a U.S. Corporation and licensed to Cirrus Logic, Inc.. Purchaser of the CS470xx part must sign a license for use of the chip and display of the SRS Labs trademarks. Any products incorporating the CS470xx part must be sent to SRS Labs for review. SRS, Circle Surround, SRS TruSurround XT, TruSurround HD4 technologies are protected under US and foreign patents issued and/or pending. SRS, Circle Surround, SRS TruSurround XT, WOW HD, TruSurround HD4, and (O) symbol are trademarks of SRS Labs, Inc. in the United States and selected foreign countries. Neither the purchase of the CS470xx part, nor the corresponding sale of audio enhancement equipment conveys the right to sell commercialized recordings made with any SRS technology/solution. SRS Labs requires all set makers to comply with all rules and regulations as outlined in the SRS Trademark Usage Manual.

